


Knox KN-CCW27Q(QB) Cooler/Warmer Instruction Manual

Features and Use


This product keeps food and drinks either warm or cold. It has both a 110V/220V AC and 12V DC power cable built-in, so it can be used in cars as well as indoors. It is not intended to change the temperature of any food, but rather maintain the temperature of food. This appliance uses an energy efficient semi-conductor to enable its dual cooling and warming functionality.

- Cools or Warms Food & Drinks
- Large Storage Space
- Built-in 12V DC Car Power Cable
- Built-in 110V/220V AC Power Cable
- Chills to 40 Degrees F
- Heats to 130 Degrees F
- Locking Handle

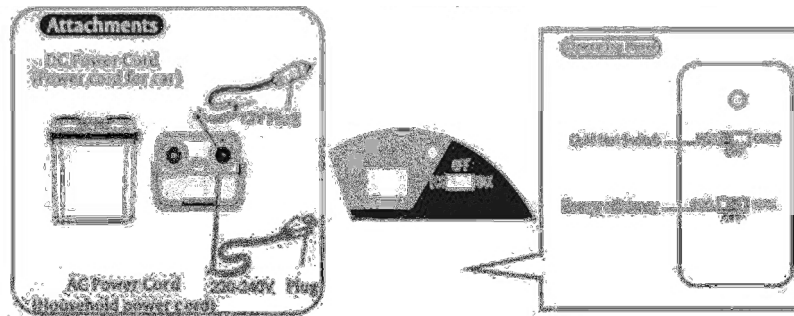

Operating Instructions

1. Ensure Power Switch is set to the OFF position in the center of the switch.
2. Choose either the 110V/220V AC plug or the 12V DC car adapter, and plug it into a power source.
3. Select Temperature
 - a. Set switch to COLD and the indicator light will turn green. Set the switch to HOT and the indicator light will turn red.

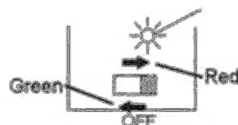

Safety Warnings

PLEASE CAREFULLY READ THE WARNINGS BELOW FOR SAFE OPERATION. MISUSE OF THIS APPLIANCE MAY CAUSE DAMAGE OR CAUSE THE MACHINE TO MALFUNCTION. MISUSING THIS APPLIANCE OR USING A DAMAGED APPLIANCE MAY RESULT IN INJURY OR DEATH.

1. Ensure fans are not blocked and that nothing is in the way of the fan exhaust, especially clothes and towels. A blocked fan can cause the unit to overheat and catch fire.
2. Ensure the sockets are tight and the cords are securely attached to the appropriate sockets. Loose sockets and cords can cause overheating, damage to the machine, and fire.
3. Keep appliance away from flammable objects and dampness to prevent explosions and fire.
4. Do not break up, tamper with, or alter this appliance.
5. Turn the machine off and unplug for at least 30 minutes before switching from Cooling to Heating.
6. Do not Rinse with Water.
7. Do not Turn Upside Down.
8. Do not shock or drop the appliance.
9. If power cord is damaged it must be replaced by the manufacturer.
10. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge with the product. Children should be supervised to ensure they do not tamper or use the appliance.