

Knox KN-TKCUP Single Serve Coffee Brewer **Instruction Manual**

Safety Warnings

- Read all instructions before using
- Do not touch hot surfaces. Use handles or knobs
- Do not immerse cord, plugs, or machine in water or any other liquid
- Close supervision is required when machine is used around children
- Unplug from outlet when not in use and before cleaning.
- Allow to cool before cleaning
- Do not operate if cord is damaged, or if the plug malfunctions or is damaged in any other way. Return appliance to nearest authorized service facility
- The use of accessory attachments is not recommended by manufacturer and may result in fire, electric shock, or injury
- Do not use outdoors
- Do not let the power cord hang over the edge of table or countertop
- Do not place the appliance on or near a hot gas stove, electric burner, or in a heated oven
- Turn power button to “OFF” before disconnecting the power cord from the outlet
- Do not use appliance for anything other than its intended use
- Scalding may occur if lid is removed during the brewing cycle
- Use on a hard, flat, level surface
- Always be sure the Lid Assembly is closed and in the locked position before turning the coffee maker on

Special Cord Instructions

- A short power supply cord is used to reduce the possibility of tripping or tangling
- An extension cord can be used
- If an extension cord is used, it must be the same electrical rating as the appliance

- This appliance has a polarized plug (with one blade wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug doesn't fit fully into the outlet, reverse the plug. If it still does not fit, contact an electrician.

Specifications

- Model – KN-TKCUP
- Voltage – 120V
- Hz - 60
- Watts – 800
- Capacity – 12oz. (360cc Max)
- Size
 - Width – 4.3" (110mm)
 - Height – 9.8" (251mm)
 - Depth – 7.5" (191mm)
- Net Weight – 2.2 lbs (1.0kg)
- Safety Compliance – UL

Operating Instructions

1. Turn the Lock Knob to the unlocked position
2. Lift Lid Assembly to open
3. Measure the amount of water (should not exceed 360ml / 12oz)(should not be less than 150ml / 5oz.) (For best taste use bottled or filtered water)
 - a) When pouring the water into the tank, ensure the Filter Basket is properly fitted on the lip of the water tank
4. Put a K-Cup into the K-Cup Holder
5. Close the Lid Assembly and turn the lock knob into the locked position
6. Place a cup or mug on the Drip Tray Cover.
 - a) Ensure the middle of the cup or mug is under the Coffee Outlet
 - b) Drip Tray Cover can be removed to adjust for the height of the cup or mug
7. Plug the power cord into an electrical outlet and press the power button
 - a) The indicator light on the power button will flash during the heating process, and will stop flashing once the machine is finished brewing.
8. Coffee brewer shuts off automatically after brewing is finished
 - a) **NOTE:** Press Power button to stop the brewing process early if desired

- b)** When brewing resumes, the indicator light may flash rapidly. If this happens, press the Power Button again to turn the machine off. Wait until the machine cools (Up to 2 Minutes), then press Power Button again to turn the machine back on and resume brewing.
- 9.** After brewing, turn the Lock Knob counter-clockwise to the unlocked position, and lift up the Lid Assembly to open.
- 10.** Discard used K-Cup

Cleaning and Care

- 1.** Always unplug coffee maker and let it cool down before cleaning
- 2.** Use a clean, damp cloth to clean all outside surfaces of the coffee maker. Do not use abrasives.
- 3.** Use a clean damp cloth to clean the K-Cup Holder. Be careful not to come into contact with the sharp stainless steel piercing tip as this can cause injury.
- 4.** Lift the stainless steel Drip Tray Cover off the Drip Tray. Remove the plastic Drip Tray from the coffee maker by pulling it until it comes loose. Wash both the Drip Tray and the Drip Tray Cover with mild soap and water
- 5.** Mineral content in the water varies depending on location. Depending on the concentration of dissolved mineral content, calcium deposits or scale may build up in your coffee brewer. This may hinder the performance of your coffee maker. Descale your coffee maker to keep it in good working condition.
 - a.** To descale fill the water tank with 360ml /12oz of a cleaning solution. The cleaning solution should consist of water and household scale remover (4 parts water to 1 part scale remover)
 - b.** Close the lid assembly and place a cup or mug with a 360ml / 12oz capacity on the Drip Tray
 - c.** Press Power Button
 - d.** Once brewing cycle is over, empty and rinse the cup or mug. Press the Power Button again to rinse the machine
 - e.** Repeat previous step to remove any lingering unpleasant taste
- 6.** Be careful when cleaning the Piercing Tip so it does not break. Breaking the piercing tip will void the warranty.
- 7.** Remove the Filter Basket from the water tank to clean it.

Storage

1. Store out of reach of children
2. The storage space should be clean and dry, away from direct sunlight and any heat source

Troubleshooting

1. Problem: Indicator Light on Power Button is Flashing Rapidly
 - a. The temperature may be too high, turn the power button off until the coffee maker cools down (up to 2 minutes)
 - b. This can also be caused by having less than 150ml / 5oz of water in the Water Tank. Pour at least 150ml / 5oz. more and allow the coffee maker to cool (up to 2 minutes) before pressing the power button again to resume brewing
2. Problem: The coffee maker is cold after pressing the power button
 - a. Ensure Power Cord is plugged in
 - b. If it is still cold, leave machine alone, it may require technical assistance or repair.